

IMPORTANT! Please completely read all instructions before attempting to use your light.

1. Charge your rechargeable 18650 batteries by properly installing them in the charger while making sure the polarity is correct (+ to + and - to -) until the red light turns green. This could take up to 8 hours.
2. Unscrew back cap to install batteries in the light. Install batteries positive end first. **Warning:** only use one 18650 battery or two CR123A primary batteries. Do not use rechargeable CR123A batteries (better known as 16340) as they will damage the light and will void any and all warranties.
3. Whenever charging any battery they should never be left unattended. Batteries can explode and should always be charged in a safe place.
4. If the light will not be used for a long period of time, charge the batteries, then install battery in light and run for 20 minutes and then take battery out and store in a dry cool place. This will prolong the life of the battery. The battery(s) should be charged every 3 months because the battery will self-discharge over time. Damages caused by batteries that are left/stored in the light and charger will void the warranty of your light.
5. The 18650 batteries have a built-in circuit that protects the battery from over and under charging. When the battery is low, the light will start to flash on and off. We suggest you charge the batteries after every use to keep them ready. You will get about 1.5 hours of run time out of the red LED light and 2–4 hours of run time out of all the rest of the lights.
6. Warning- Never look directly into light bulb when on. The LED is VERY bright and can damage your eyes.
8. **The light is water-resistant and not waterproof.** Any light that is found to be water damaged via the internal moisture indicator strip is not covered and will void warranty.
9. If your pressure or on/off switch is attached to your weapons with Velcro or any other mounting material, always completely remove the wired pressure or on/off switch from your weapon before unscrewing the tailcap from your light. Unscrewing the tailcap before detaching the switch from the weapon will cause the wire to separate from the light. Skip steps 10–13 if you did not order a bow mounted or rifle mounted light.
10. If you ordered the bow mounted light mount the on/off or pressure switch on the front of your bow's riser in front of the grip so you can turn the light on and off with ease while at full draw. Practice at night before hunting. We suggest using at least a ¼ inch peep for best visibility. Shooting at night is completely different, so please practice first to get a feel for everything.
11. Before hunting with the light, please check your state laws to make sure it is legal to hunt at night with the aid of an artificial light source.
12. We suggest using a sight with lighted pins on your bow sight but not too bright, just enough to light your pins.
13. When attempting to illuminate a varmint or wild hog with the light, we suggest you aim the light high above your target and then slowly lower the light on the animal to help avoid them from becoming spooked.

Troubleshooting

1. Make sure that all connecting parts (reflector, body, tailcap, LED) are screwed on tightly or else the light will not work properly or the light will be very weak.
2. Examine the battery; make sure that the battery is charged and also be sure that the battery has been installed properly with the + end inserted into the light first.
3. The black washer on the LED is removable however; it must be installed at all times to ensure a proper seal. Please see illustration for correct placement of the black washer onto the LED. The flat side of the washer fits against the LED.



Removed washer



This is the proper placement of washer onto LED